

Factory Reset Grundfos Eco-Propel Pumps

1. Go to "Settings" tab
2. Arrow Down to "General Settings", then hit "OK"
3. Arrow Down to "Return To Factory Settings", then hit "OK"
4. You are on the "Return To Factory Settings" screen
5. Hit Right Arrow button
6. "NO" and "YES" options will appear
7. Hit the Down Arrow button, until "YES" is highlighted in the box. Then Hit "OK"
8. "Note" screen will appear. Hit "OK"
9. Pump screen will restart
10. After the restart. "Language" screen will appear
11. Arrow Up to "ENGLISH US"
12. When highlighted in box, Hit Right arrow for Next
13. "Start-Up Guide" screen will appear. Hit Right arrow for Next
14. "Date Format" screen will appear
15. Scroll down to "MM-DD-YYYY". Hit "OK", Then Right arrow
16. Set the Date, when complete, Hit Right arrow for Next
17. "Time Format" screen will appear. Select a Format, Hit "OK", and then hit Right arrow.
18. Set the Time. Then hit right arrow for Next
19. "Setting Of Pump" screen will appear
20. Hit down button to select "Go To Assist Pump Setup", then hit "OK" button
21. "Setting of Pump Screen" screen will appear
22. Hit Right Arrow button (twice)
23. "Select Control Mode" screen will appear
24. Arrow down until you get to "Constant Curve"
25. Hit "OK" and Constant Curve will be highlight in blue. Hit right arrow button for Next
26. "Adjust Setpoint" screen will appear
27. Hit "OK" and adjust to "100%", then hit "OK". Then Hit right arrow for Next
28. "Summary" screen will appear, hit "OK"

29. Notification screen will appear momentarily
30. Then "Home" screen will appear
31. Arrow right to the "Settings" tab
32. Arrow down to "Setpoint", and confirm that it is "100%"
33. Then hit left arrow button, to go back to "Settings" options, and arrow down to "Control Mode"
34. Hit "OK", and confirm "Constant Curve" is highlighted.
35. Hit back arrow to go back to "Settings" options, and hit the "Home" button
36. Once you are on the "Home" screen, arrow right till you get to "Assist" tab
37. Scroll down to "Setup, Analog Input", then hit "OK"
38. "Setup Analog" screen will appear
39. Hit the right arrow for Next
40. "Function Of Analog Input" screen will appear
41. Scroll down until "External Setpoint Influence" is highlight. Hit "OK", then right arrow for Next
42. "Electrical Signal" screen will appear
43. Highlight "0-10V", hit "OK", then right arrow for Next
44. "Summary" screen will appear, hit "OK"
45. "Assist Has Been Carried Out" notification screen will appear momentarily
46. Then you should be back on the "Home" screen.
47. Arrow right to the "Setting" tab
48. Arrow down to "Setpoint Influence", hit "OK"
49. Highlight "External Setpoint Function", then hit "OK"
50. Then highlight "Linear With Min", hit "OK"
51. Then hit "Home" button and the Pump should be programmed.